


# PARTITION SLATWALL PANELS

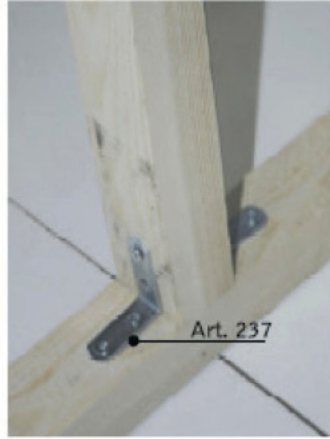

- First you must build the fir wood solid structure, paying attention to the measures of the panels and to potential slits for the doors. After that, please read the instruction book, page 1 .



- As you can see, the building process is similar to the one used for the plasterboard walls, but the outcome is different: the equipped wall is immediately ready. Plasterboard or painting are not necessary.

